

FIRMWARE UPDATE INSTRUCTION + UPDATE HISTORY

To assure the best possible performance of your equipment we carry out regular software updates to correct possible errors and/or adding new features. Therefore, we advise you to always install the latest updates. **READ THE INTRUCTIONS + UPDATE HISTORY CAREFULLY!**

BT-CHROMA800

The attached "GSD-file" should be programmed using the special "FIRMWARE UPDATER2+" unit from our Briteq® brand. (order code: B05019) Update instructions are included with the firmware updater.

UPDATE HISTORY

V1.02 (2022-10-05)

We advise to install this update as it brings solutions for some known issues.

- Solves a bug when strobing with color fade.
- Added an extra menu option for the Display AUTOLOCK function.

Level 1	Level 2	
SETUP MENU DMX functions	DMX Address	XXX - YYY
	CHANNEL Mode	*****
	W-DMX ON/OFF	ON /OFF
	W-DMX Unlink	YES/NO
	NO DMX Mode	Blackout
		Freeze
		Stand-Alone
	Display FLASH	on/off
	Display AUTOLOCK	on/off/ DMX-controlled
	Temp Units: C/F	°C / F

DISPLAY AUTOLOCK

Used to lock the setup menu against unwanted altering of the settings.

- Press the ▼/▲ buttons to browse the menu until the required function shows up.
- Press the ENTER button: the values can be changed
- Use ▼/▲ buttons to select the desired mode:
 - **OFF** The setup menu can be used at any time.
 - **ON** After a short time the setup menu locks automatically, the display shows **LOCKED *******.
Unlock the display by pressing the buttons in this order: ▲, ▼, ▲, ▼, ENTER.
 - **DMX-controlled:** this mode is specially for use in fixed installations. You can disable/enable both the buttons and display using a specific DMX-command: for more information, see chapter "ELECTRICAL INSTALLATION + USE" → subheading "Fixed Installations"
- Once the correct option shows on the display, press the ENTER button to save it.

V1.01

Original firmware as used in batch1.

WWW.BRITEQ-LIGHTING.COM

©2022